


JANGRO Product Guide



Sovereign Floor Undercoat/ Sealer BD240-5

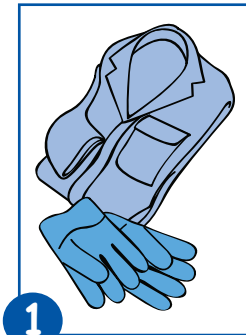


1

Put on PPE.



2

Place safety signs.

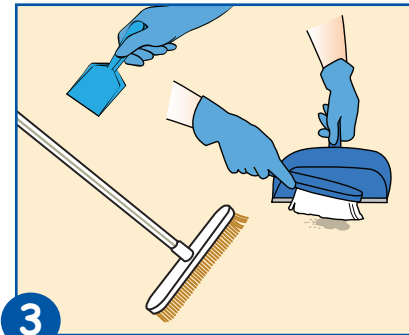


3

Prepare floor




4

Pour solution undiluted
into bucket or tray

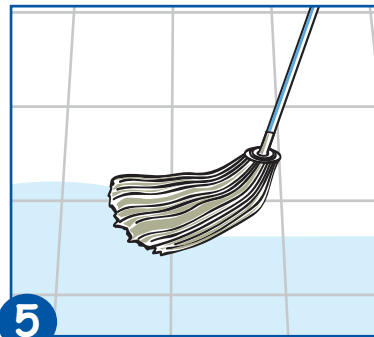


5

Apply a thin coat with
mop/applicator. If floor
is old and porous, a second
coat may be required.

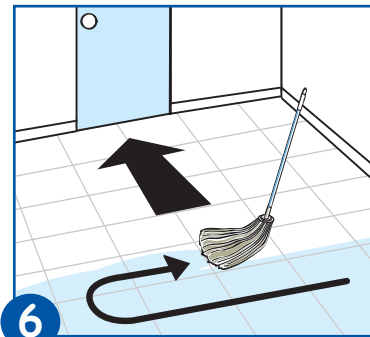

6

Start at furthest corner
away from door.

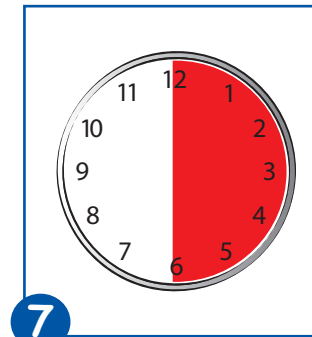

7

Leave to dry for 30
minutes.



8

Remove safety signs.

Health & Safety
Please refer to relevant
COSHH Sheet.